

Full Wall

Assembly Instruction

FABRIC

- 600D PU Polyester
- 600D PU Polyester Fluorescent Yellow
- 120g Mesh Polyester

SIZE

10ft/15ft/20ft



- 1 Set up your tent frame and tent top first



- 2 Attach the top edge of the full wall to the tent valance (Both the front and back sides are sewn with Velcros strap, so you can decide the artwork side to face either way you want.)



- 4 Secure the walls on the tent legs via the Velcros straps on left and right sides



- 5 The setup is finished