


INDOOR BANNER STANDS


ONE CHOICE - KAI PRODUCT CODE: OC-KAI



INSTRUCTIONS

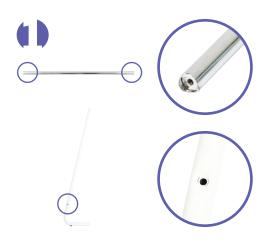


 At each end of the Bottom Support Tube, locate the screw holes. Then locate the holes on each side of the Leg Tubes.

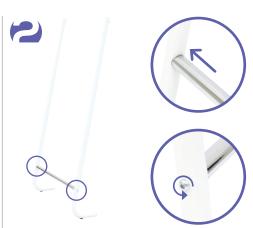

 Align the Bottom Support Tube screw holes with holes of the lower leg tubes on each side. Insert the large screws and tighten to secure with allen key.



 Connect the Bottom Tube and the bottom Leg Tubes to align holes together. Insert the screws and tighten to secure with allen key.

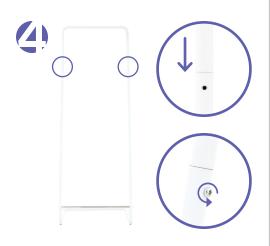

 Insert the Top Tube on top of the Leg Tubes to align holes. Insert the screws and tighten to secure with allen key.





• Swiftly drape with the pillowcase graphic onto the frame. Pull down graphic to cover whole frame.





• Complete stand.

