

Z BOX

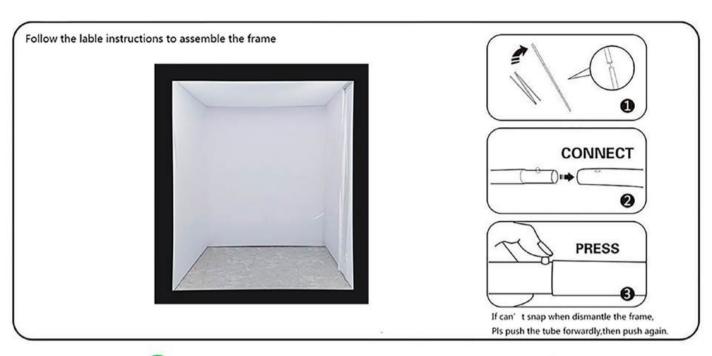

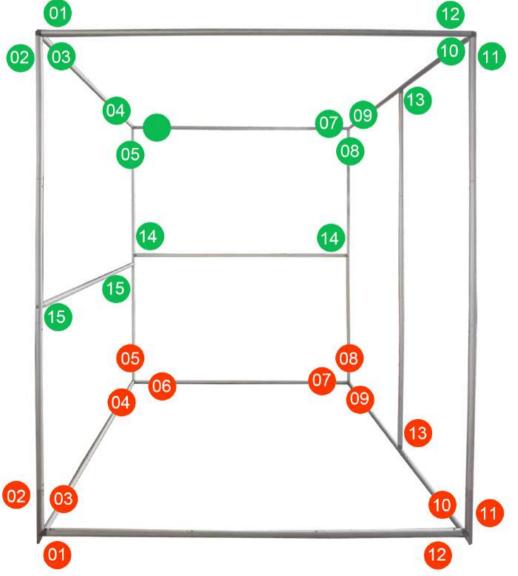

2.Pull the backdrop flat from left to right and from top to bottom. The Velcro with loops is the left side of backdrop, Then pull the zipper from the bottom left to the right and make it flat.



3.Install the front four black border bars, first install the bottom, four side bars, one of which is only a row of screw holes, This is the bottom, the one with two identical backs is the side, and the other one is the top. First, clamp the buckle with only one screw hole C to the bottom round tube, then use the Phillips screw tool to fix the buckle and the front edge strip, and then fix the two vertical edge strips in the same way, and finally fix the top horizontal edge strip.





4.First, fix the loops side of the backdrop on the left side on the hooks side of the round tube and pull it flat. Then fix the four corners of the top to the four corners of the frame. After fixing, pull the corresponding edge hair flat. After the top is installed, fix the door curtain.





5.Install the transparent film in front, carefully open the packaging on the surface of the transparent film, and then fix the loop surface on the hook surface of the frame, and the installation is completed. Finally, according to the LOGO designed by the customer, first sprinkle water evenly on the transparent film where the LOGO is to be pasted, then take off the background of the LOGO, stick it to the corresponding position, and use a card to drive off the water to complete the installation.

